GRAPHTEC
WIRELESS LAN SETUP

Wireless LAN Setup for the Graphtec CE8000 Series Cutter

Setting up your **Wireless LAN** is easy and accomplished in a few simple steps.

Please follow the **ON-SCREEN INSTRUCTIONS:**

1 Select Language

2 Select Unit of Measure

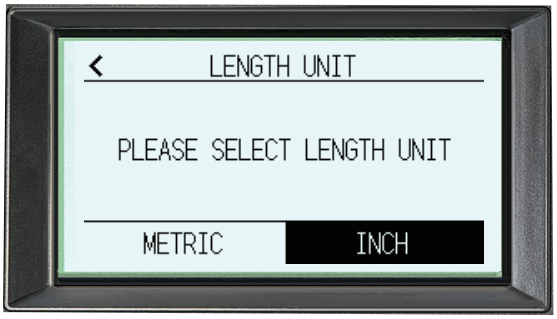

3 Confirm Ready for Setup

4 Select Wireless Network

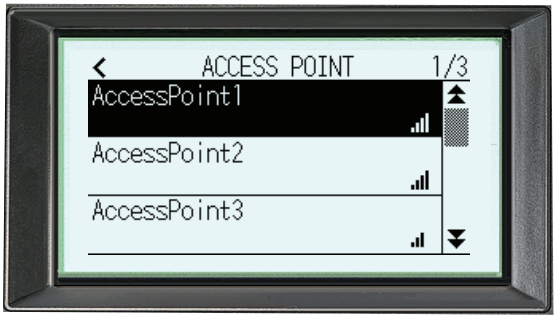

5 Input Password

Input the password to your Wireless Network.

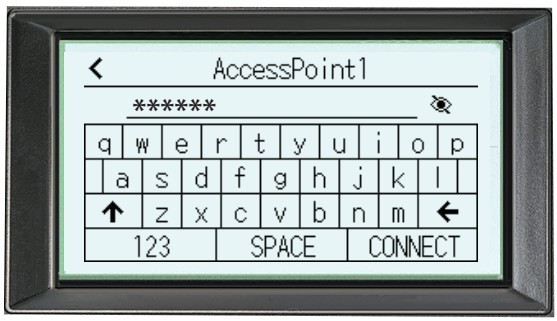

6 Connect to Wireless Network

When the password has been accepted, it will ask if you want to Connect to the Network.

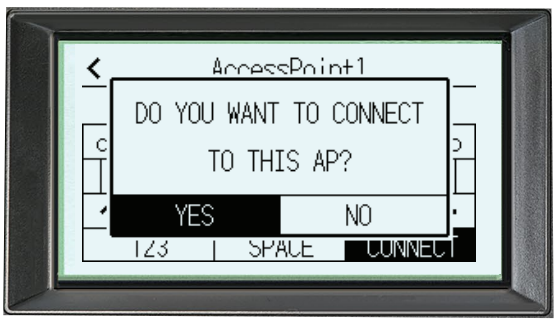

GRAPHTEC WIRELESS LAN SETUP

7 Assign Dynamic IP Address

When connected, the screen will show the Default Static IP address with DHCP mode turned **OFF**

8 Switch to DHCP mode

Turn DHCP **ON** and then click **OK**

THIS STEP IS VERY IMPORTANT:
A Dynamic IP address protocol is set and your cutter will automatically reinitialize.

9 Confirmation of Connection

After restarting, your cutter will show the **WIRELESS ICON** at top right of display.

This indicates the Wireless LAN has been successully setup and is now ready to be discovered on your Local Wireless Network.

For further information please reference ***Chapter 9.2 Connecting via Wireless LAN*** from the CE8000 User's Manual.

GRAPHTEC
Graphtec America, Inc.